

GIANT YELLOWKNIFE MINES LIMITED

SAMPLING AND DETERMINATION OF ARSENIC TRIOXIDE
IN BAGHOUSE DUST SHIPMENTS TO KOPPERS

L.J. Connell
Mill Metallurgist

SAMPLING AND DETERMINATION OF ARSENIC TRIOXIDE
IN BAGHOUSE DUST SHIPMENTS TO KOPPERS

A. SAMPLING METHOD

A two stage Ramsey/Galigher rotary sampling unit (Model 500 or equivalent) will be installed between the rotary vane feeder on the bottom of the loadout storage silo and the screw conveyor feeding the highway trucks. Figure 1.

The Ramsey/Galigher rotary sampler is a self-contained dust tight unit designed to take sample cuts from a vertical stream of dry material. Sampling will be performed at predetermined intervals controlled by an automatic timer. The dust sample from the first rotary sampler will be screw conveyed to a secondary rotary sampler of similar design. Figure 2.

The dust sample from the second stage rotary sampling unit will fall by gravity into a Galigher Model 15C-200 Lineal indexing sample collector (or equivalent). This unit will separate the final dust sample into four equal portions, each of which is representative of the consignment. The four equal portions are collected in plastic sample bags which will be sealed upon completion of the truck loading. Each of the four samples will be one to two pounds in size and labelled with a consignment number and date loaded.

B. SAMPLE HANDLING

The four sealed plastic sample bags will be distributed as follows:

- One sample to be shipped to Koppers with the loaded highway truck.
- One sample to be used by Giant Yellowknife Mines to determine the moisture content of the Arsenic Trioxide dust in that particular consignment.

- One sample to be used by Giant Yellowknife Mines to determine the concentration of arsenic, gold and iron in that particular consignment.
- One sample to be kept in reserve for a period of six months, in an impervious plastic container at Giant Yellowknife Mines, to be used by an umpiring agency in the event of a discrepancy as to the arsenic content of the consignment.

C. DETERMINATION OF THE MOISTURE CONTENT OF ARSENIC TRIOXIDE DUST

Within 48 hours of truck loading, one sealed sample will be used to determine the moisture content of the truck consignment. The sample will be roughly split into two clean, tared metal weighing dishes. The wet dust weight of each sample will then be determined by weighing the samples on a top loading analytical balance with an accuracy rating of ± 0.5 grams. The balance will be standardized once per year by an approved balance serviceman.

The sample dishes will then be placed in a vacuum drying oven at an internal temperature of 120° F and left for a period not less than 24 hours. The sample pans will then be re-weighed on the same balance and the moisture content calculated as follows:

Wet Dust weight - Dry Dust weight = weight of water

$$\% \text{ Moisture} = \left(\frac{\text{weight of water}}{\text{wet dust weight}} \right) \times 100\%$$

The average of the two samples will be taken as the moisture content of that particular consignment.

D. ANALYTICAL DETERMINATION OF THE ARSENIC, GOLD AND IRON CONTENT OF EACH CONSIGNMENT

A second sealed plastic sample bag will be chemically analyzed to determine the arsenic, gold and iron content of each consignment using standard analytical techniques. These standard techniques are appended.

E. DETERMINATION OF TOTAL CONTAINED As_2O_3

The amount of dry As_2O_3 contained in each consignment will be calculated as follows:

Wet Consignment Weight: The weight of the fully loaded truck as measured at the N.W.T. Government's Enterprise truck scale minus the truck tare weight will be taken as the wet consignment weight.

Dry Consignment Weight: The wet consignment weight multiplied by $\left(1 - \frac{\% \text{ Moisture}}{100}\right)$ will be taken as the dry consignment weight.

Concentration of Arsenic Trioxide: The equivalent concentration of contained arsenic trioxide will be calculated by multiplying the concentration of total arsenic determined analytically by 1.3203.

The 1.3203 figure is determined as follows:

$$\frac{2 \times \text{Atomic wt. of As} + 3 \times \text{Atomic wt. of O}}{2 \times \text{Atomic wt. of As}}$$

where: atomic wt of As = 74.9216
atomic wt of O = 15.9994

The total contained pounds of arsenic trioxide in each consignment will then be calculated as follows:

Dry consignment weight (in pounds (advp.)) multiplied by the equivalent concentration of contained arsenic trioxide (in weight percent/100).

1. Method for Analysis of Commercial 'Arsenic', Arsenious Oxide, As_2O_3

From "Scott's Standard Methods of Chemical Analysis", Fifth Edition, Volume 1, page 109, published by D. Van Nostrand Company modified as follows:

Determination of Arsenic on Baghouse Dust

Sample weight 0.2 grams.

Put sample in 600 ml beaker and add 5-7 grams of NaOH plus 50 ml water.

Allow the dust to dissolve.

Dilute to 200 or 300 ml and add two drops of Methyl Orange.

Acidify with HCl to color change.

Add NaHCO_3 to color change adding a 5 gram excess.

Add 5 ml of starch solution.

Cool.

Titrate with standard Iodine to a purple end point.

When dissolving the baghouse dust in the Concentrated NaOH there will be slight discoloration due to the presence of iron in the dust, but the main thing is to make sure that all the dust is dissolved before further dilution. It may be necessary to break down some of the lumps with a stirring rod.

It is also advisable to titrate a blank with the iodine as it does take a few drops of iodine to impart the proper depth of purple.

Standard Iodine Solution:

33.83 grams KI and 16.94 grams I_2 per litre.

Dissolve the KI in water first, then pour the concentrated solution onto the iodine, as the iodine dissolves, transfer it into volumetric flask. Standardize against 0.2 grams of Arsenous Acid as in the normal assay.

$\text{wgt. arsenous acid} \times 0.7577 = \text{arsenic equivalent.}$

Stable Starch Solution:

Measure out 1500 mls of distilled water into 2000 ml beaker. Take two 250 ml beakers, add 12 grams of soluble starch to one and 40 grams of solid KOH to the other. Make a water slurry of the starch and dissolve the KOH in water. Pour the starch slurry into the 1500 ml of water, then pour in the KOH solution slowly with stirring. Let the mixture stand for 4 hours or overnight. Add 55 ml of HCl and adjust to pH 6, then add 12 mls of Acetic acid and dilute to 2000 ml.

APPENDIX A

2. The concentration of gold and iron contained in samples of Baghouse dust will be determined using atomic adsorption analytical techniques.

After dissolution of the baghouse dust, contained gold is extracted into a methyl isobutyl ketone layer. The concentration of gold in this layer is measured using a Perkin Elmer model 303 Atomic adsorption spectrophotometer.

The concentration of iron is measured on a Pye Unicam model SP 1900 Atomic adsorption spectrophotometer. Both methods are standard however we can supply details upon request.


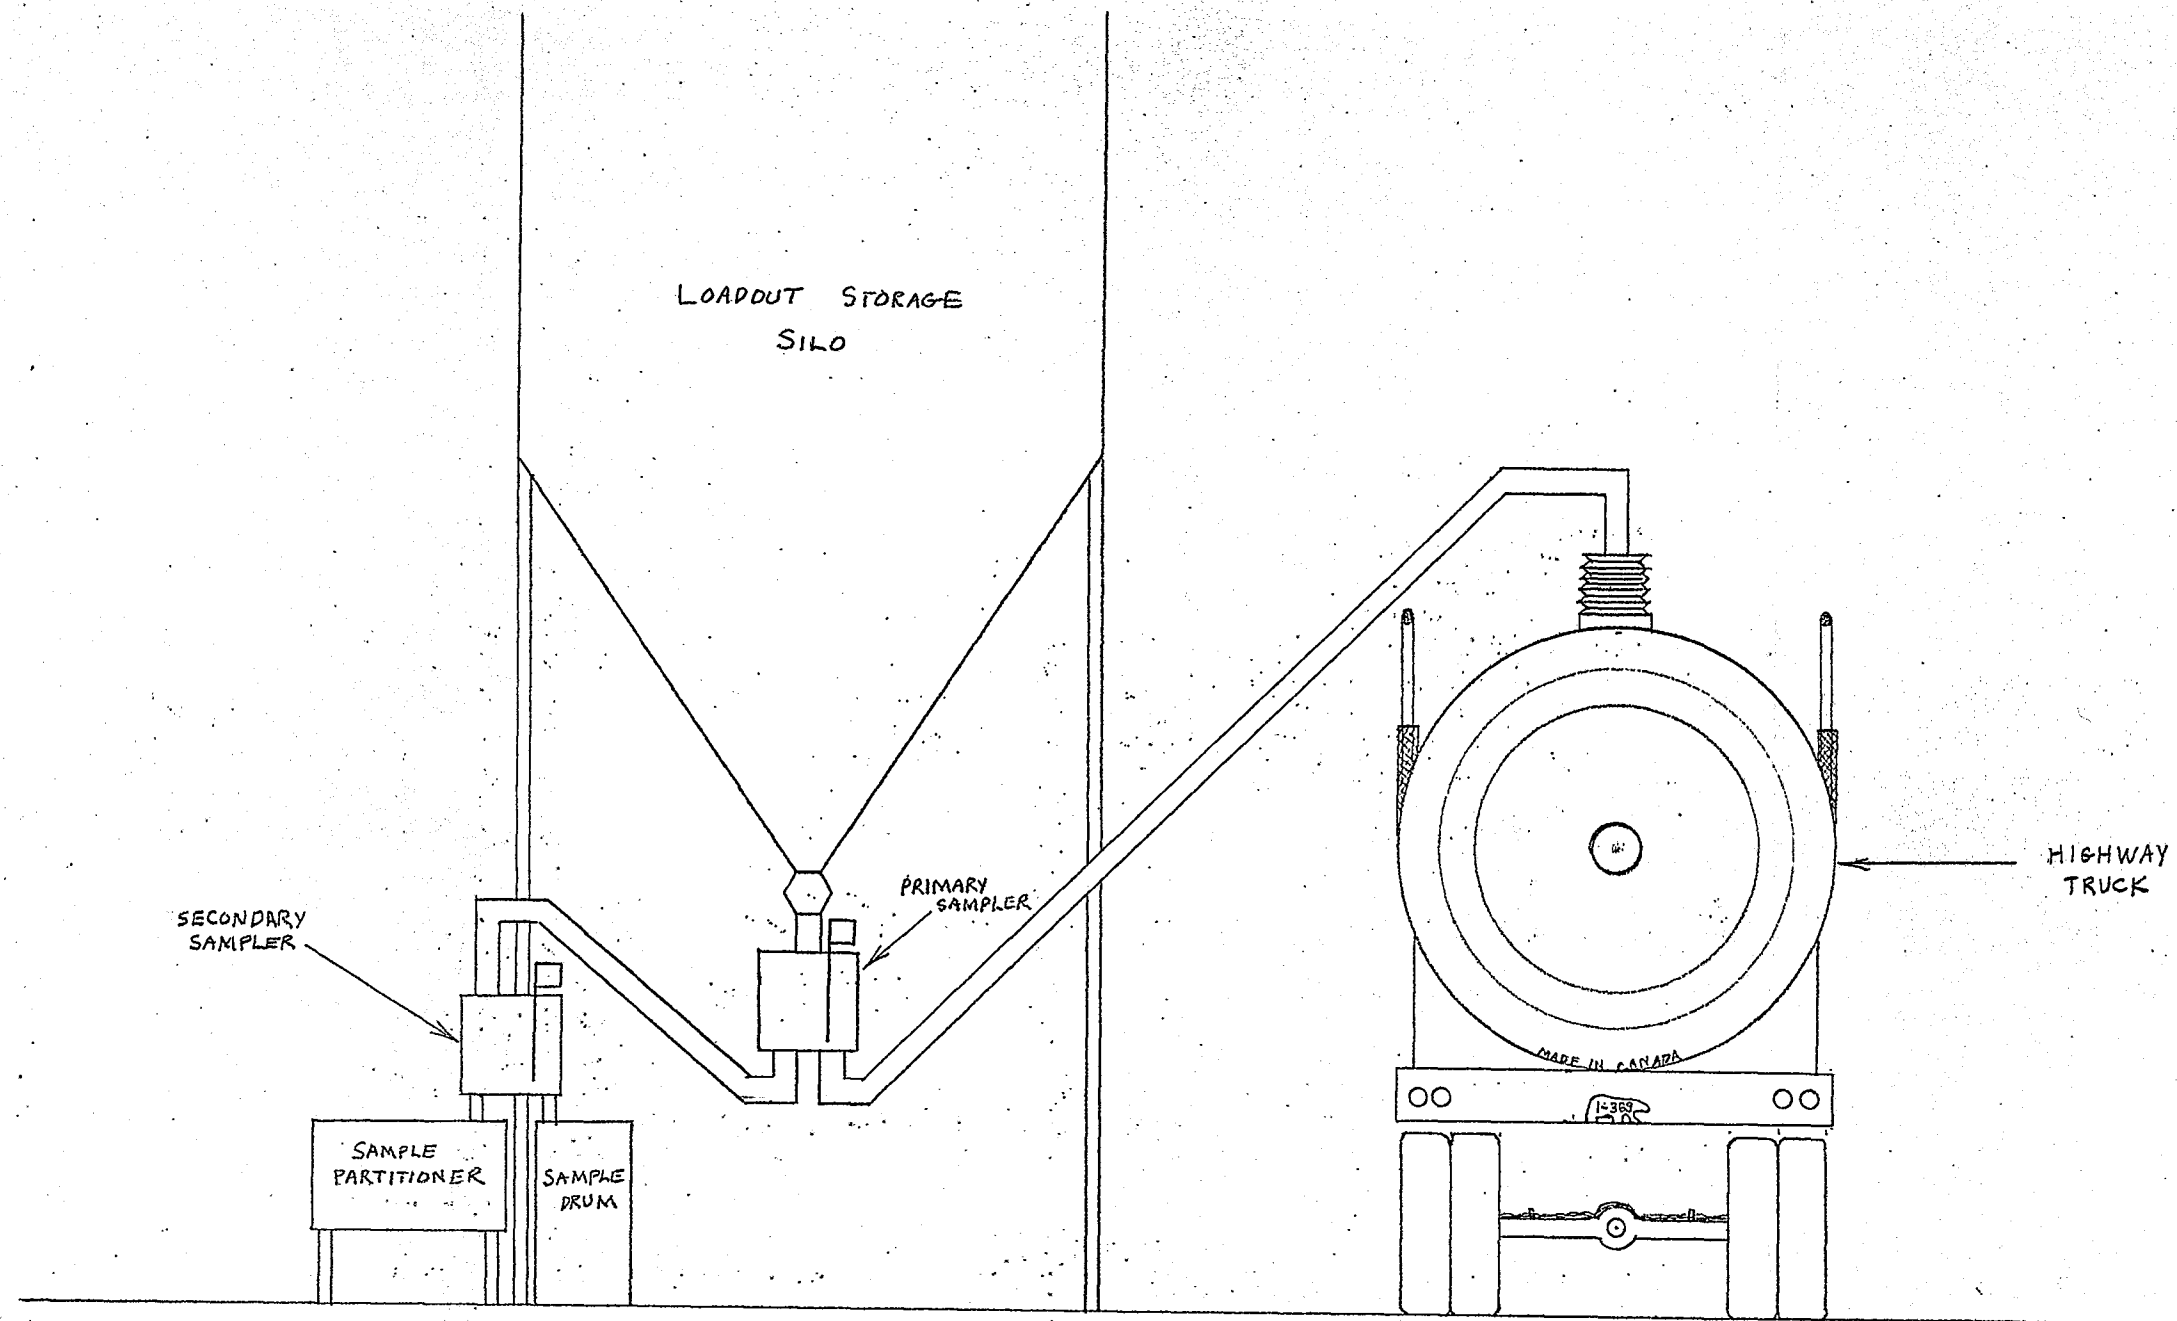


FIGURE 1 SAMPLING OF ARSENIC TRIOXIDE IN BAGHOUSE DUST SHIPMENTS TO KOPPERS

APRIL 11, 1980

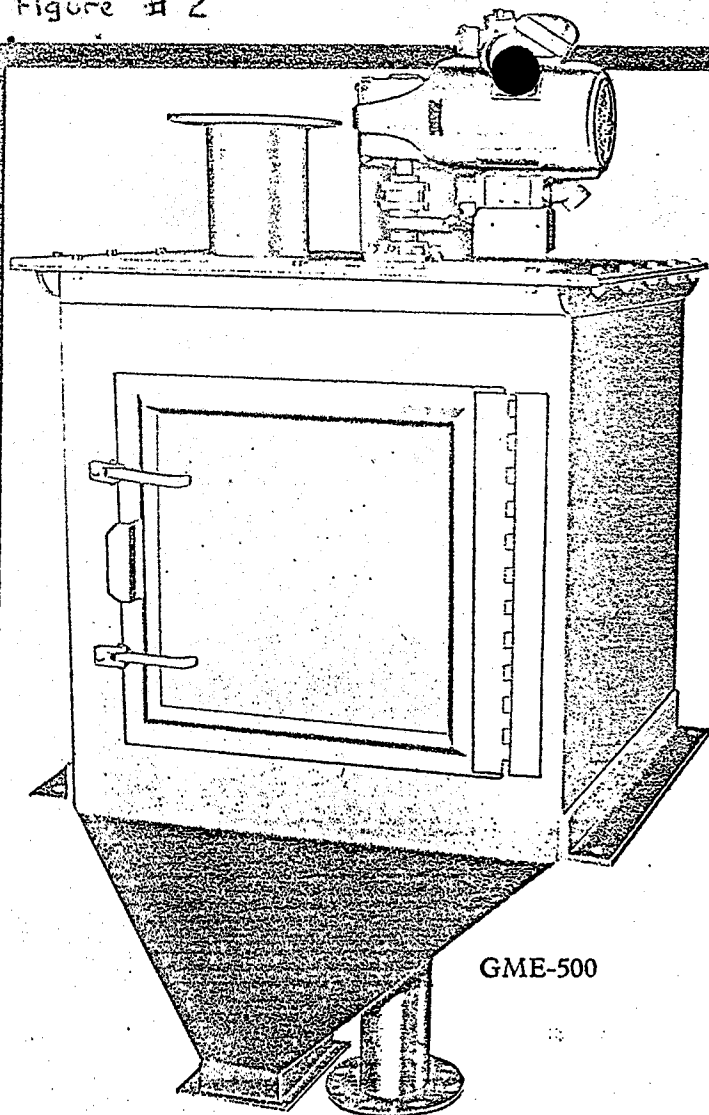

MODEL GM500/GME500 ROTARY SAMPLING MACHINE

The Ramsey/Galigher rotary sampler is a self-contained dust-tight unit designed to take sample cuts from a vertical stream of dry material. Sampling can be performed at predetermined intervals controlled by an automatic timer or on a continuous basis. The samplers can be equipped with one or more sample cutters revolving on a central shaft. The rotary sampler takes a fixed percentage of the feed per cutter employed, based on cutter opening when operated on a continuous basis. On a timed basis, the standard sample extraction formula will apply.

CONDENSED SPECIFICATIONS



GM-500 Self-Contained Rotary Sampler

Drive:	electric
Speed:*	12 in./sec.
Cutter Opening:	0 - 1-1/4"
Infeed:	3" diameter pipe
Capacity:	500 lbs. per hour
Particle Size:	-8 mesh

GME-500 Self-Contained Rotary Sampler


Drive:	electric
Speed:*	21 in./sec.
Cutter Opening:	0 - 2-1/4"
Infeed:	6" diameter pipe
Capacity:	5 tph
	650 GPM

*NOTE: at center of cutter

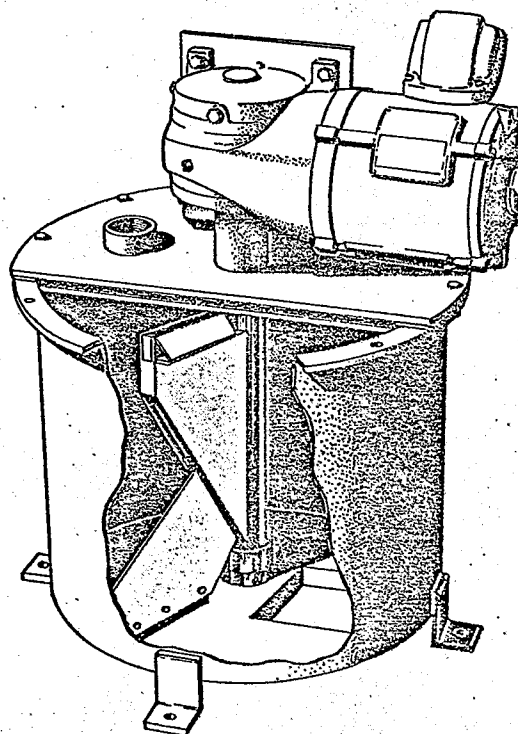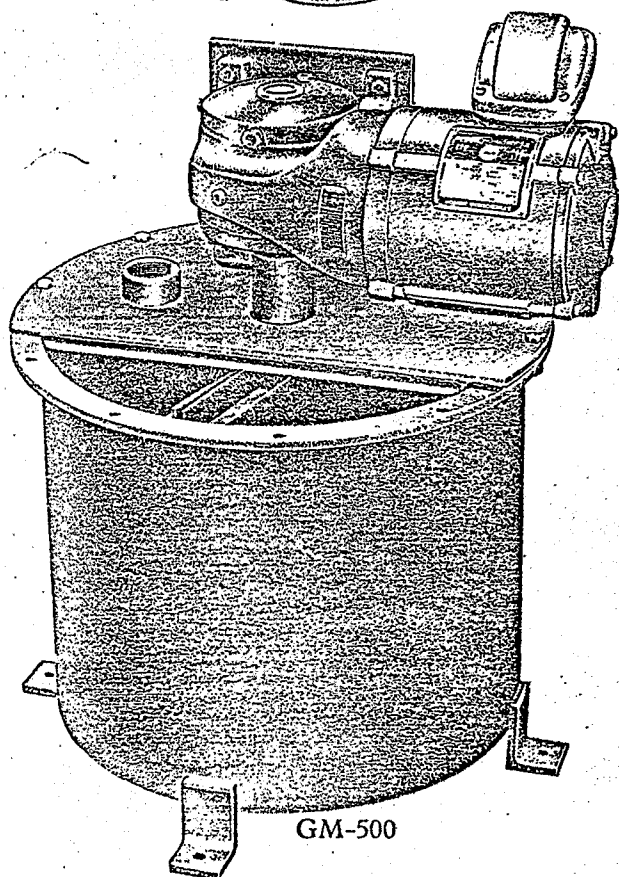


RSD-3400 ROTARY SAMPLE DISTRIBUTOR

The Galigher (Patent Pending) eight-station sample distributor has the capability of separating the final sample into eight equal portions for analysis, each of which is representative of the consignment. All operating components within the sample distributor in contact with the material are fabricated from type 304 stainless steel, while other areas of the distributor are fabricated of mild steel or plastic. Each of the eight stations is isolated from the others and provided with plastic bottles to receive and store the individual sample in a dust-free status until removed for processing. The distributor is complete with stainless steel feed hopper, and magnetic vibrator feeder.

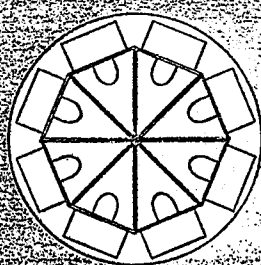


SECTION A-A

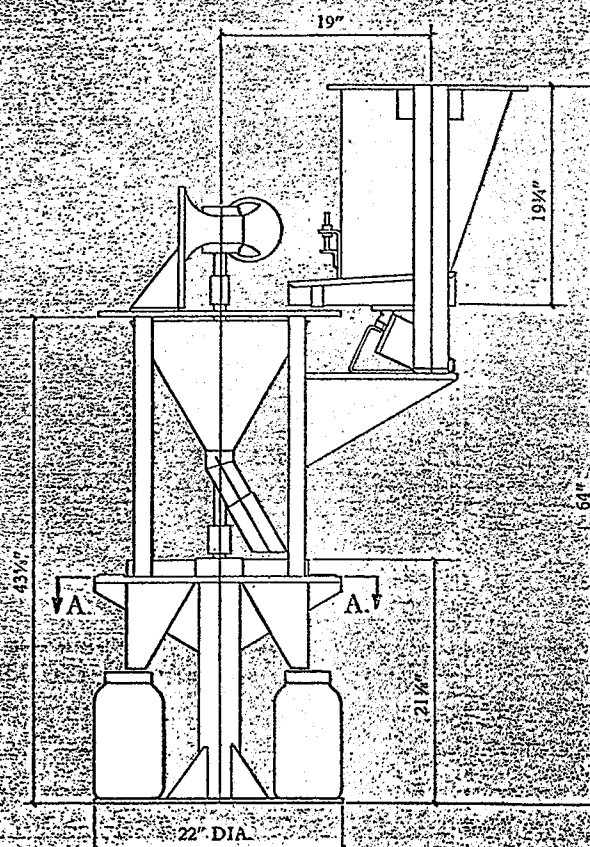

ISC-200 LINEAL INDEXING SAMPLE COLLECTOR

This sample collector has been designed for low headroom applications. It can be furnished with any number of collection stations, as required. All surfaces in contact with the sample are fabricated of type 304 stainless steel, while other areas are fabricated of mild steel. Stainless steel containers store each individual sample in a dust-free, moisture tight status until removed to the laboratory for processing. The machine is complete with required sample cans, drive motor, and limit switch indexing control. A plastic bag model is also available where final sample will not exceed 15 pounds per station.

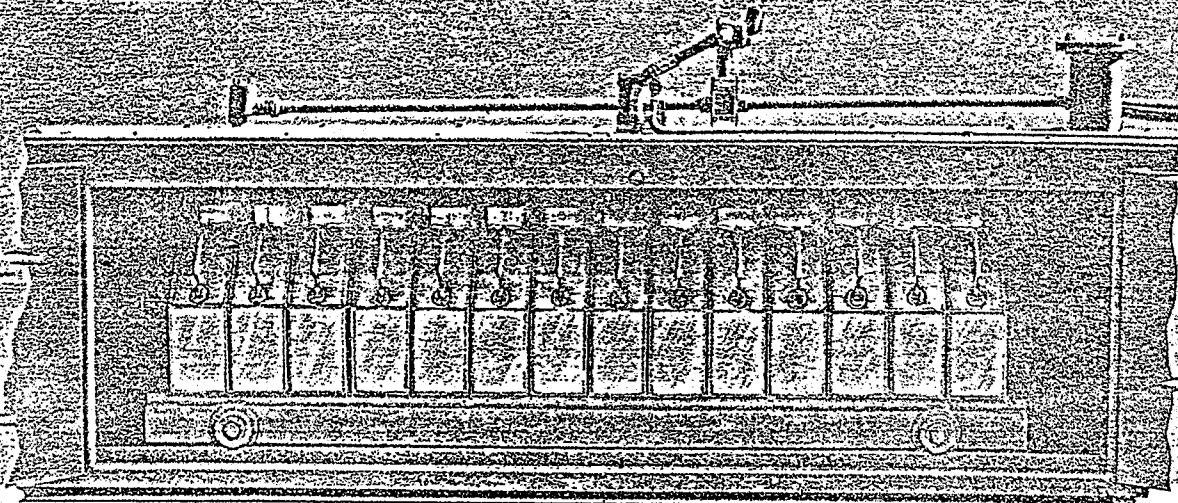

MODEL GM500/GME500 ROTARY SAMPLING MACHINE

The Ramsey/Galigher rotary sampler is a self-contained dust-tight unit designed to take sample cuts from a vertical stream of dry material. Sampling can be performed at predetermined intervals controlled by an automatic timer or on a continuous basis. The samplers can be equipped with one or more sample cutters revolving on a central shaft. The rotary sampler takes a fixed percentage of the feed per cutter employed, based on cutter opening when operated on a continuous basis. On a timed basis, the standard sample extraction formula will apply.

CONDENSED SPECIFICATIONS

GM-500 Self-Contained Rotary Sampler

Drive:	electric
Speed:*	12 in./sec.
Cutter Opening:	0 - 1-1/4"
Infeed:	3" diameter pipe
Capacity:	500 lbs. per hour
Particle Size:	-8 mesh

GME-500 Self-Contained Rotary Sampler

Drive:	electric
Speed:*	21 in./sec.
Cutter Opening:	0 - 2-1/4"
Infeed:	6" diameter pipe
Capacity:	5 tph 650 GPM


*NOTE: at center of cutter

GME-500


GM-500

RSD-3400 ROTARY SAMPLE DISTRIBUTOR

The Galigher (Patent Pending) eight-station sample distributor has the capability of separating the final sample into eight equal portions for analysis, each of which is representative of the consignment. All operating components within the sample distributor in contact with the material are fabricated from type 304 stainless steel, while other areas of the distributor are fabricated of mild steel or plastic. Each of the eight stations is isolated from the others and provided with plastic bottles to receive and store the individual sample in a dust-free status until removed for processing. The distributor is complete with stainless steel feed hopper, and magnetic vibrator feeder.

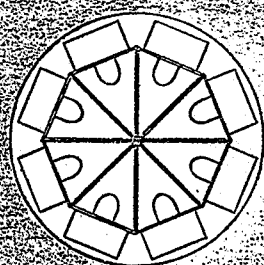

SECTION A-A

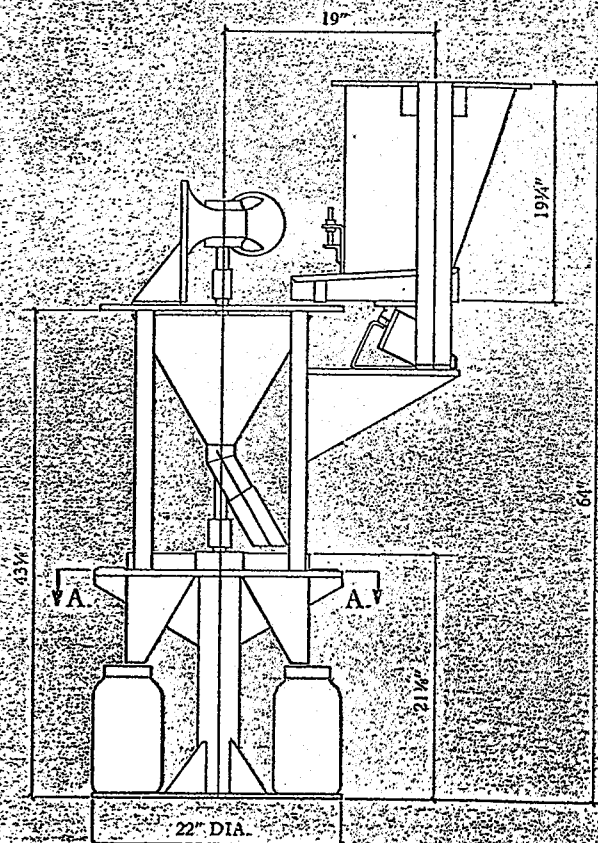

ISC-200 LINEAL INDEXING SAMPLE COLLECTOR

This sample collector has been designed for low headroom applications. It can be furnished with any number of collection stations, as required. All surfaces in contact with the sample are fabricated of type 304 stainless steel, while other areas are fabricated of mild steel. Stainless steel containers store each individual sample in a dust-free, moisture tight status until removed to the laboratory for processing. The machine is complete with required sample cans, drive motor, and limit switch indexing control. A plastic bag model is also available where final sample will not exceed 15 pounds per station.

